



Lag Screw Expansion Shields


Use these precision die-cast shields to anchor in all types of masonry. They're ideal between bricks in mortar joints, in cinder block, or for attaching steel to concrete.



Lag Screws Sold Separately See Page 6-1



Part #	Lag Size	Drill Size & Length	Box Quantity	Wt.
5/16S	5/16"	1/2" x 1-1/4" (Shorts)	50	1.75 lbs.
5/16L	5/16"	1/2" x 1-3/4" (Longs)	50	2.3 lbs.
3/8S	3/8"	5/8" x 1-3/4" (Shorts)	50	3.4 lbs.
3/8L	3/8"	5/8" x 2-1/2" (Longs)	50	4.75 lbs.


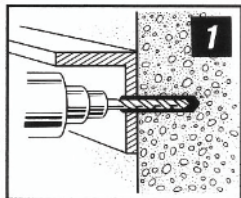


Nail-Drive Anchors



Nail Drive Anchor:


- * Can be used in concrete, block and brick.
- * Easy through-the-work installations.
- * Low-profile, one piece anchor assembly.
- * Suitable for use in high compressive strength concrete. (Where codes do not permit powder-actuated fastening.)

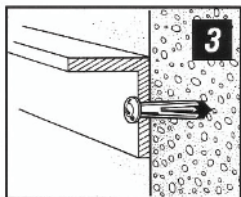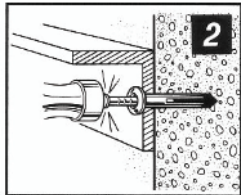

Part #	Drill Size & Length	Box Qty	Wt.
POW2808	1/4" x 1"	100	2.4 lbs.
POW2814	1/4" x 1-1/4"	100	2.6 lbs.
POW2820	1/4" x 1-1/2"	100	2.8 lbs.
POW2826	1/4" x 2"	100	3.5 lbs.

Tubular Wall Anchors Fits 1/4" or 5/16" Lag Screws

Our most economical anchor for use in drywall, concrete, wood or brick. To install, insert anchor in drilled hole, insert screw through fixture into anchor and tighten.

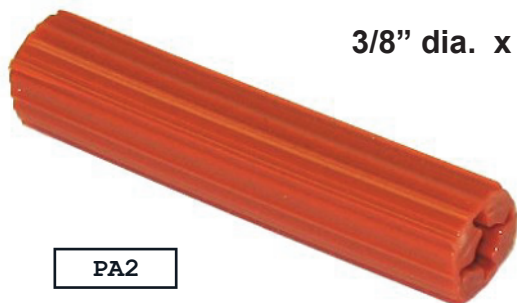

PA2

3/8" dia. x 2" L.

50 per box
Wt. 0.25 lb.



Lag Screws Sold Separately
See Page 6-1