

Gate Hinges / Closers

1-17



SUREClose®

READYFit

Surface Mount Hinge/Closer - with Steel Brackets



SureClose ReadyFit Hinge
RF SM W



Non Self-Closing Load Bearing
#74001315 - 180° Opening

SureClose ReadyFit Hinge/Closer
RF 108 W



Adjustable Self-Closing Speed
And Final Snap-Close Action
#74108315 - 180° Opening
With Hold Open Feature

SureClose ReadyFit Hinge/Closer
RF 108SF W



Adjustable Self-Closing Speed
And Final Snap-Close Action
#74108325 - 90° Opening
Non-Hold Open Feature



Kit / Weight	Combination Part # Hinges with Brackets	Description	Self-Closing Gate Weight	Hinge Gap	Hinge Post	Self-Closing From	Max Gate Swing	Hold Open
SURECLOSE READYFIT KITS - With Non-Hold Open Feature 90°								
180 LBS.	74108325 + 74001315	Self Closing with Final Snap & Load Bearing	180 lbs.	1/2" - 1-3/8"	2" +	90°	90°	NO
260 LBS.	74108325 x (2)	Self Closing with Final Snap x 2	260 lbs.	1/2" - 1-3/8"	2" +	90°	90°	NO
SURECLOSE READYFIT KITS - With Hold Open Feature 180°								
0 LBS.	74001315 x (2)	Load Bearing Only & Load Bearing Only	0 lbs.	1/2" - 1-3/8"	2" +	--	180°	YES
180 LBS.	74108315 + 74001315	Self Closing with Final & Snap Load Bearing	180 lbs.	1/2" - 1-3/8"	2" +	85°	180°	YES
260 LBS.	74108315 x (2)	Self Closing with Final Snap x 2	260 lbs.	1/2" - 1-3/8"	2" +	85°	180°	YES

Features:

- * Weldable steel brackets or fasten with screws.
- * Easy Install - No special tools or holes in post.
- * Gap variance of 1/2" - 1-3/8".
- * All mounting brackets and fasteners included.
- * Quick alignment legs.
- * Safety gate models available.
- * Improved snap action (all 108 models).
- * New non-removable adjustment nozzles.
- * Designed for new and existing gates.


GATE GAP VARIANCE:

1/2" - 1 3/8" (12-35mm)

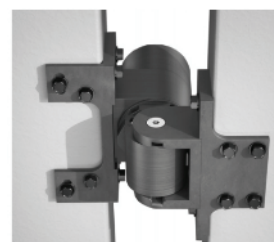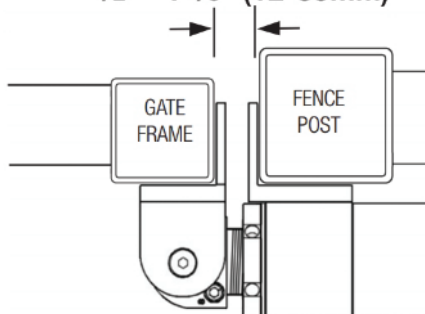

Gate Open View From Inside

Adjusting The Closing Speed And Final Snap Action

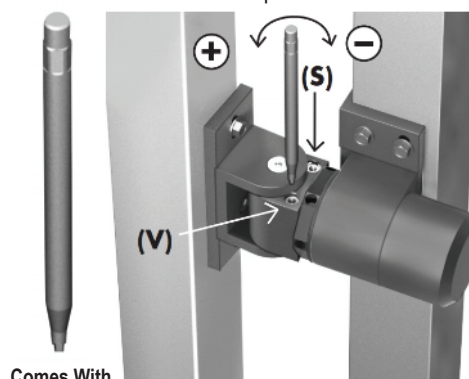

Comes With
Adjustment
Tool #7401i

Caution: Sensitive adjust-
ment, rotate ¼ turn at a time.

V = Closing Speed
S = Final Snap Action

Turn nozzles clockwise to
decrease speed & counter
clockwise to increase speed.

CAUTION:

1) You Must Install A Gate Stop With This Product !

All SureClose RF models require an
added gate stop to prevent the gate
from being forced past 90 degrees,
causing permanent damage to the
self-closing mechanism. SureClose
products do not contain an external
gate stop. It is up to the purchaser to
provide the proper stop for your spe-
cific application. **Failure to use a
gate stop will void your warranty.**

Sure Close ReadyFit Gate Stop

7403



7-1/2" L. x 2-5/16" W. x 2-13/16" H.